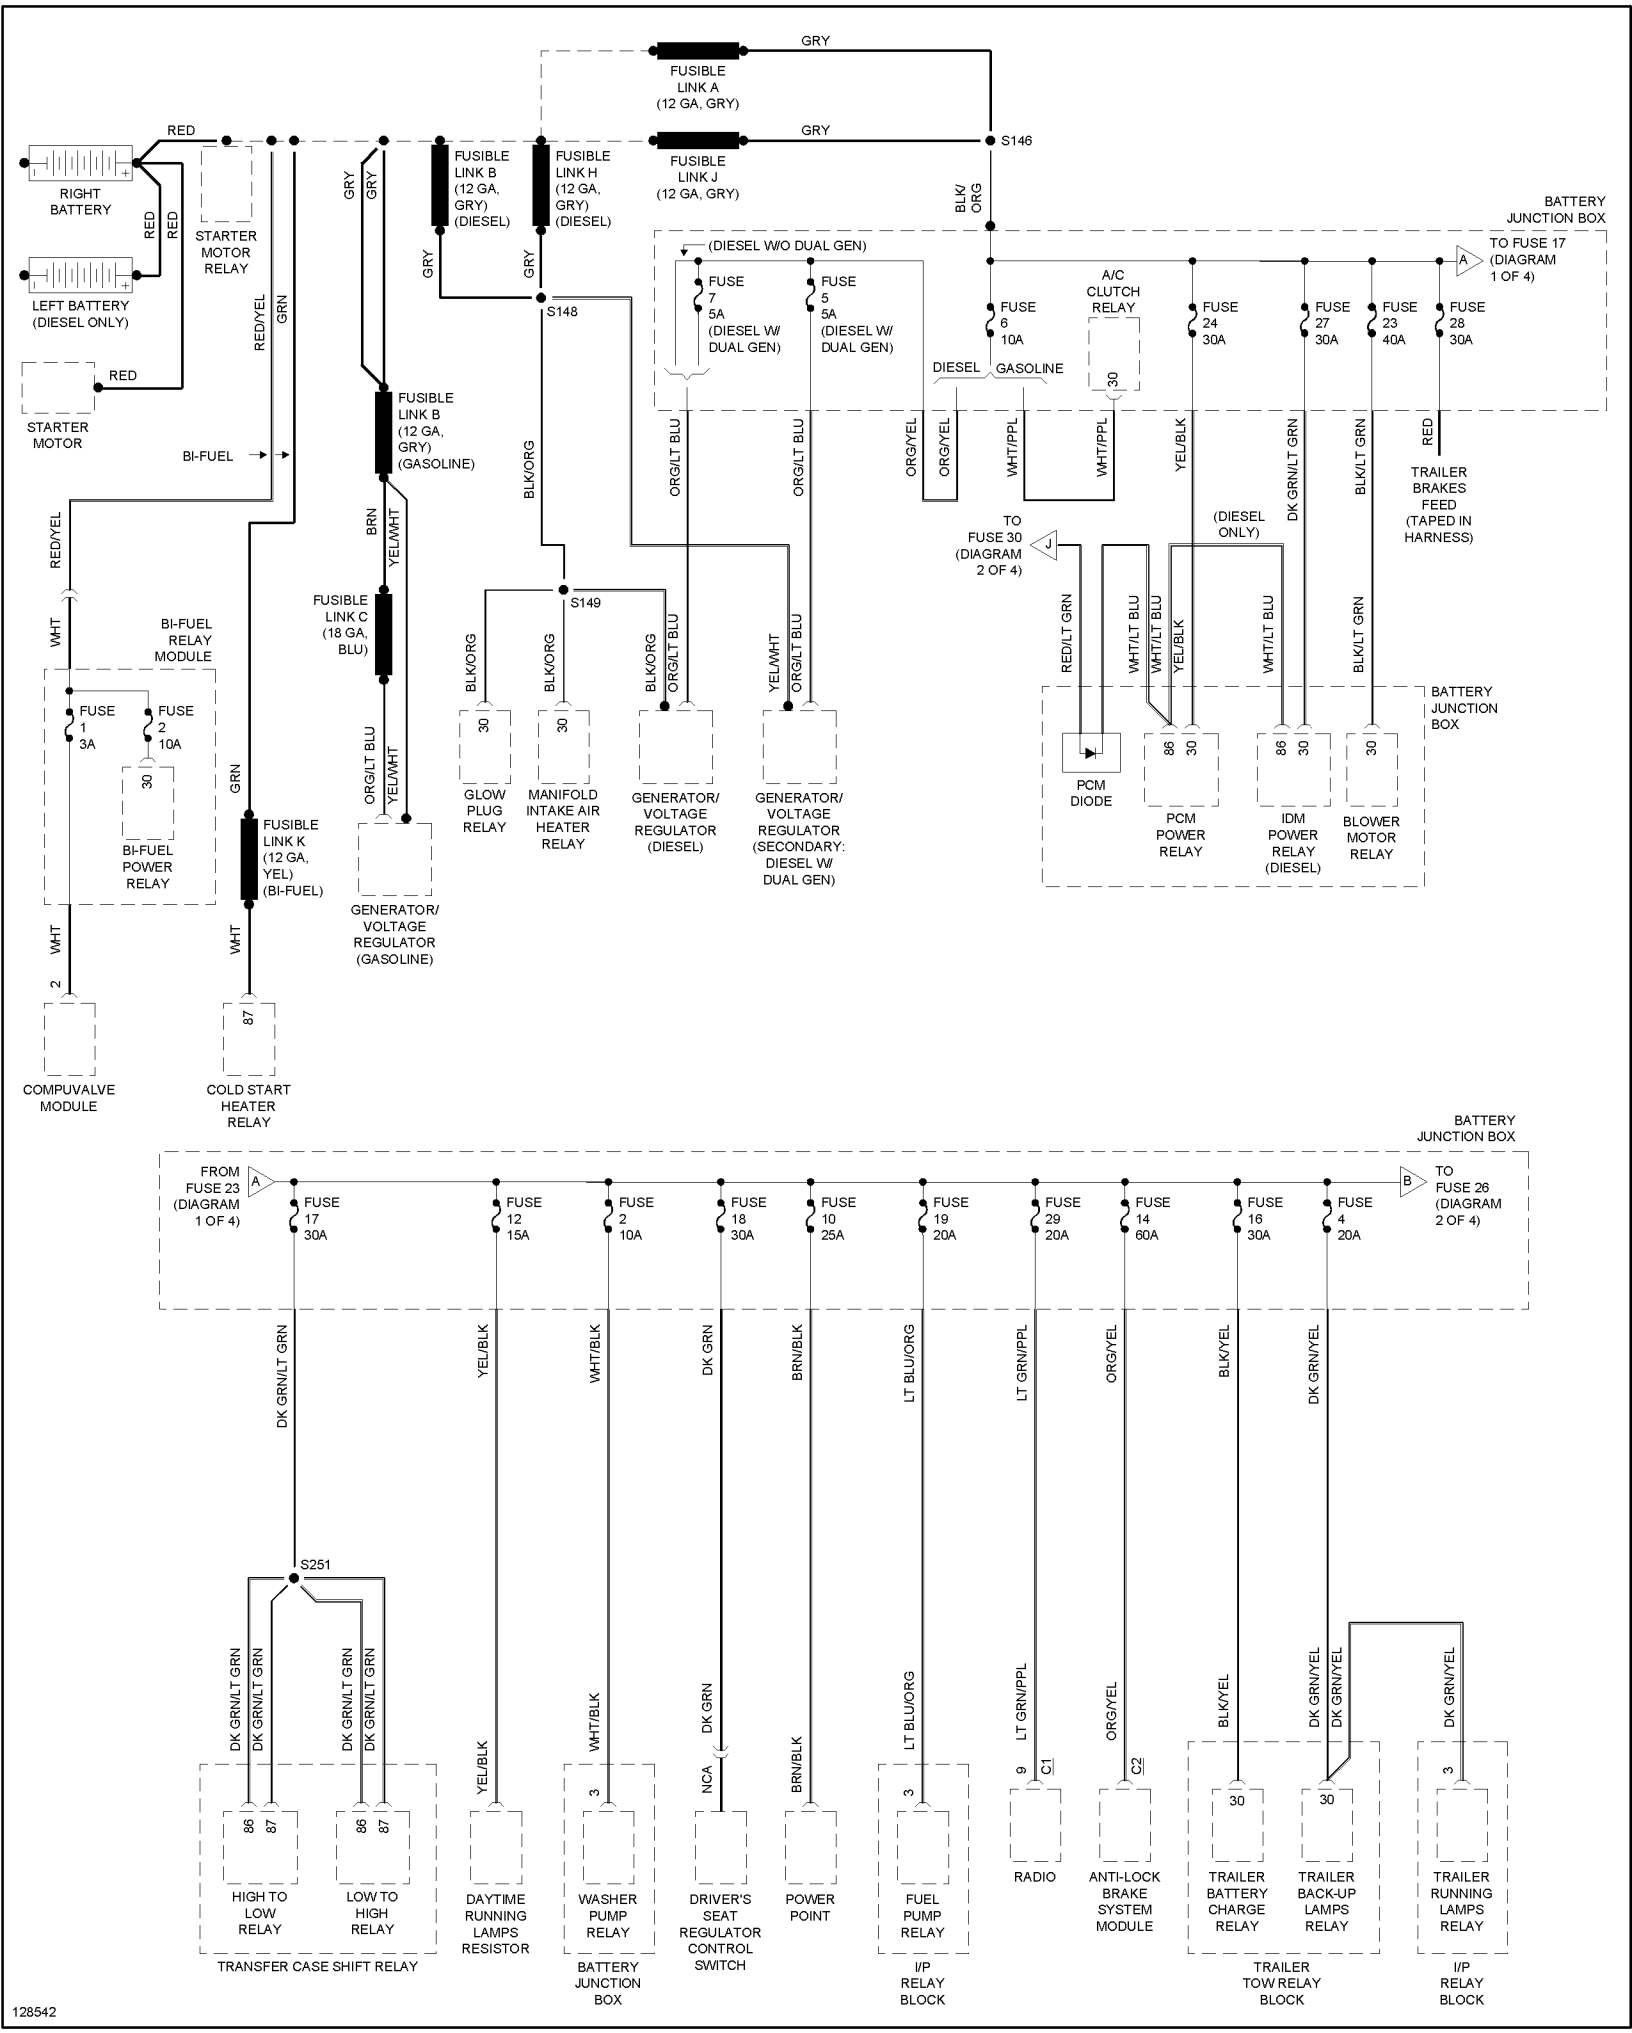
RIGHT BATTERY
LEFT BATTERY (DIESEL ONLY)
STARTER MOTOR RELAY
STARTER MOTOR
RED
RED/YEL
GRN
GRY
FUSIBLE LINK A (12 GA, GRY)
FUSIBLE LINK J (12 GA, GRY)
FUSIBLE LINK B (12 GA, GRY) (DIESEL)
FUSIBLE LINK H (12 GA, GRY) (DIESEL)
S146
S148
S149
BLK/ORG
BATTERY JUNCTION BOX
TO FUSE 17 (DIAGRAM 1 OF 4)
(DIESEL W/O DUAL GEN)
FUSE 7 5A (DIESEL W/ DUAL GEN)
FUSE 5 5A (DIESEL W/ DUAL GEN)
FUSE 6 10A
A/C CLUTCH RELAY
FUSE 24 30A
FUSE 27 30A
FUSE 23 40A
FUSE 28 30A
DIESEL
GASOLINE
TRAILER BRAKES FEED (TAPED IN HARNESS)
BI-FUEL
FUSIBLE LINK B (12 GA, GRY) (GASOLINE)
FUSIBLE LINK C (18 GA, BLU)
FUSIBLE LINK K (12 GA, YEL) (BI-FUEL)
BRN
YEL/WHT
ORG/LT BLU
BLK/ORG
ORG/YEL
WHT/PPL
YEL/BLK
DK GRN/LT GRN
BLK/LT GRN
TO FUSE 30 (DIAGRAM 2 OF 4)
(DIESEL ONLY)
RED/LT GRN
WHT/LT BLU
WHT
BI-FUEL RELAY MODULE
FUSE 1 3A
FUSE 2 10A
BI-FUEL POWER RELAY
GLOW PLUG RELAY
MANIFOLD INTAKE AIR HEATER RELAY
GENERATOR/ VOLTAGE REGULATOR (DIESEL)
GENERATOR/ VOLTAGE REGULATOR (SECONDARY: DIESEL W/ DUAL GEN)
GENERATOR/ VOLTAGE REGULATOR (GASOLINE)
PCM DIODE
PCM POWER RELAY
IDM POWER RELAY (DIESEL)
BLOWER MOTOR RELAY
COMPUVALVE MODULE
COLD START HEATER RELAY
FROM FUSE 23 (DIAGRAM 1 OF 4)
TO FUSE 26 (DIAGRAM 2 OF 4)
FUSE 17 30A
FUSE 12 15A
FUSE 2 10A
FUSE 18 30A
FUSE 10 25A
FUSE 19 20A
FUSE 29 20A
FUSE 14 60A
FUSE 16 30A
FUSE 4 20A
DK GRN/LT GRN
YEL/BLK
WHT/BLK
DK GRN
BRN/BLK
LT BLU/ORG
LT GRN/PPL
ORG/YEL
BLK/YEL
DK GRN/YEL
S251
HIGH TO LOW RELAY
LOW TO HIGH RELAY
TRANSFER CASE SHIFT RELAY
DAYTIME RUNNING LAMPS RESISTOR
WASHER PUMP RELAY
DRIVER'S SEAT REGULATOR CONTROL SWITCH
POWER POINT
FUEL PUMP RELAY
RADIO
ANTI-LOCK BRAKE SYSTEM MODULE
TRAILER BATTERY CHARGE RELAY
TRAILER BACK-UP LAMPS RELAY
TRAILER TOW RELAY BLOCK
TRAILER RUNNING LAMPS RELAY
I/P RELAY BLOCK
128542