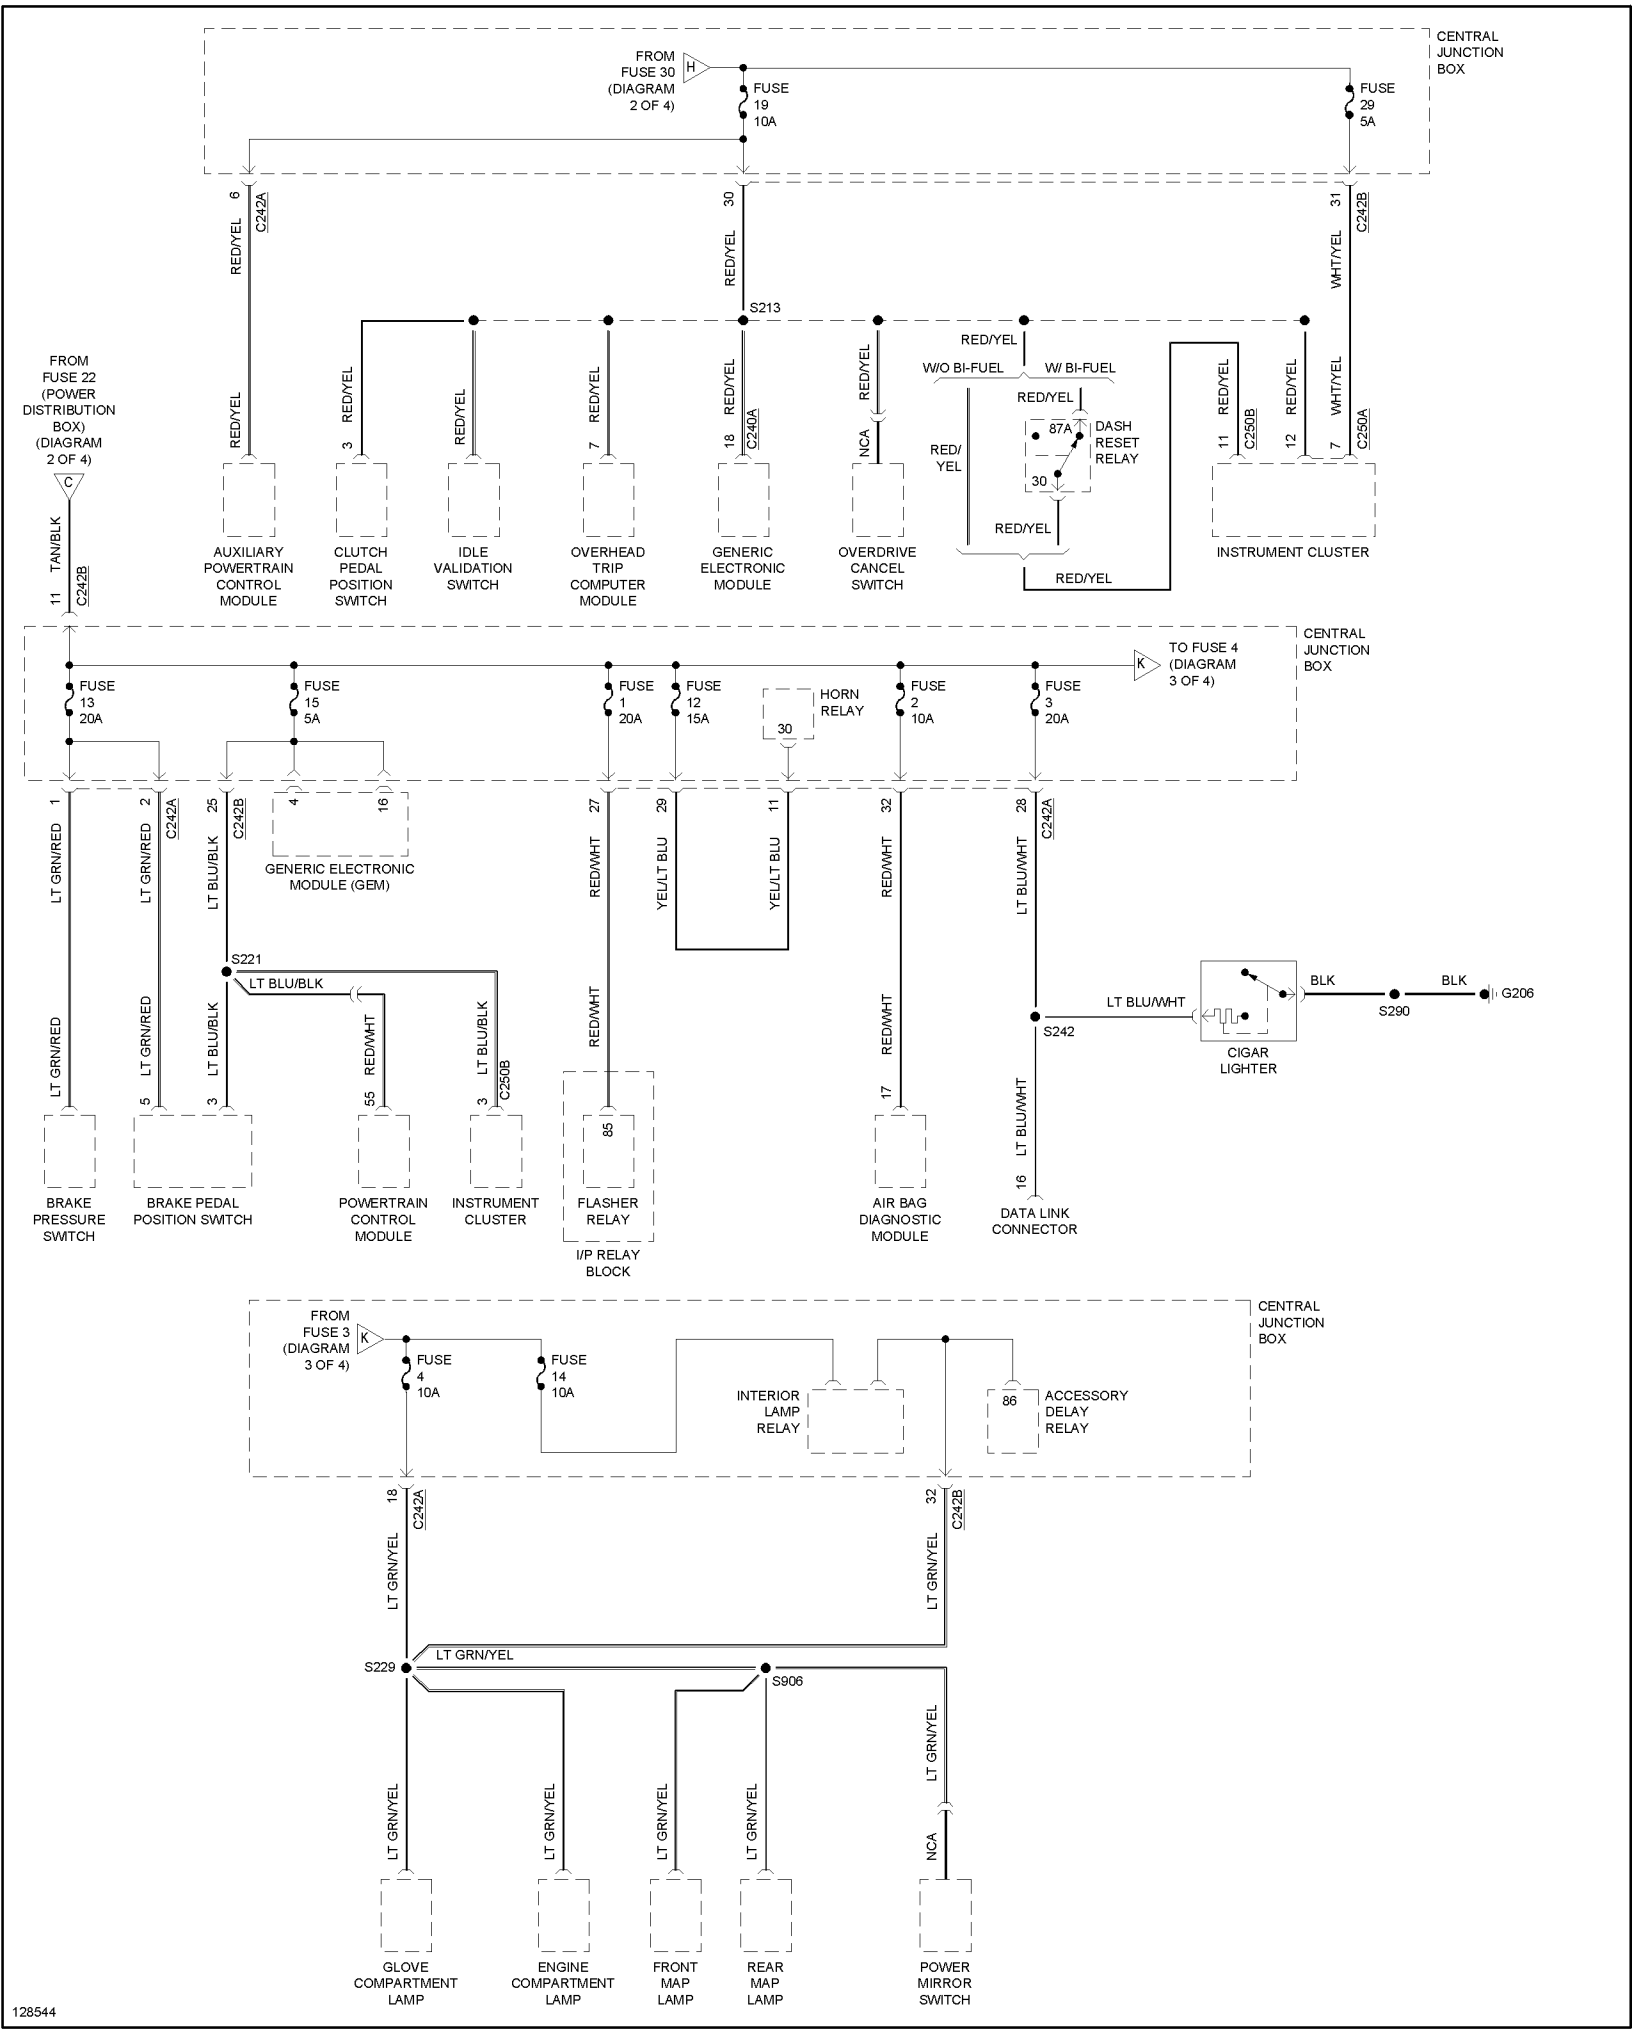
CENTRAL JUNCTION BOX
FROM FUSE 30 (DIAGRAM 2 OF 4)
H
FUSE 19 10A
FUSE 29 5A
RED/YEL
6
C242A
30
RED/YEL
S213
31
C242B
WHT/YEL
FROM FUSE 22 (POWER DISTRIBUTION BOX) (DIAGRAM 2 OF 4)
C
TAN/BLK
11
C242B
RED/YEL
AUXILIARY POWERTRAIN CONTROL MODULE
3
RED/YEL
CLUTCH PEDAL POSITION SWITCH
RED/YEL
IDLE VALIDATION SWITCH
7
RED/YEL
OVERHEAD TRIP COMPUTER MODULE
18
RED/YEL
C240A
GENERIC ELECTRONIC MODULE
RED/YEL
NCA
OVERDRIVE CANCEL SWITCH
RED/YEL
W/O BI-FUEL
W/ BI-FUEL
RED/YEL
RED/ YEL
87A
DASH RESET RELAY
30
RED/YEL
RED/YEL
11
C250B
12
RED/YEL
7
WHT/YEL
C250A
INSTRUMENT CLUSTER
CENTRAL JUNCTION BOX
FUSE 13 20A
FUSE 15 5A
FUSE 1 20A
FUSE 12 15A
HORN RELAY
30
FUSE 2 10A
FUSE 3 20A
K
TO FUSE 4 (DIAGRAM 3 OF 4)
1
LT GRN/RED
2
LT GRN/RED
C242A
25
C242B
LT BLU/BLK
4
16
GENERIC ELECTRONIC MODULE (GEM)
27
RED/WHT
29
YEL/LT BLU
11
YEL/LT BLU
32
RED/WHT
28
C242A
LT BLU/WHT
S221
LT BLU/BLK
LT GRN/RED
5
LT GRN/RED
3
LT BLU/BLK
55
RED/WHT
3
LT BLU/BLK
C250B
RED/WHT
85
17
RED/WHT
16
LT BLU/WHT
S242
LT BLU/WHT
BLK
S290
BLK
G206
CIGAR LIGHTER
BRAKE PRESSURE SWITCH
BRAKE PEDAL POSITION SWITCH
POWERTRAIN CONTROL MODULE
INSTRUMENT CLUSTER
FLASHER RELAY
I/P RELAY BLOCK
AIR BAG DIAGNOSTIC MODULE
DATA LINK CONNECTOR
CENTRAL JUNCTION BOX
FROM FUSE 3 (DIAGRAM 3 OF 4)
K
FUSE 4 10A
FUSE 14 10A
INTERIOR LAMP RELAY
86
ACCESSORY DELAY RELAY
18
C242A
LT GRN/YEL
32
C242B
LT GRN/YEL
S229
LT GRN/YEL
S906
LT GRN/YEL
LT GRN/YEL
LT GRN/YEL
LT GRN/YEL
LT GRN/YEL
NCA
GLOVE COMPARTMENT LAMP
ENGINE COMPARTMENT LAMP
FRONT MAP LAMP
REAR MAP LAMP
POWER MIRROR SWITCH
128544